



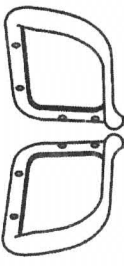


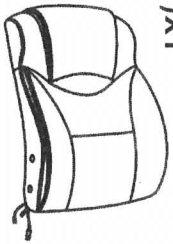


 




BT-2690P PARTS

ASSEMBLY INSTRUCTION

(1)X1		(7)X1	
(2)X1		(8)X5	
(3)X1(L)X1(R)		(9)X4	
(4)X1		(10)X8	
(5)X1		(11)X4	
(6)X1		(12)X8	
		(13)X1	
		(14)X1	