


# BT-7818 PARTS

# ASSEMBLY INSTRUCTION


(1)X1

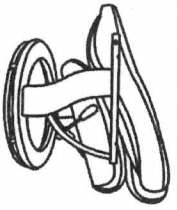

(7)X4



①

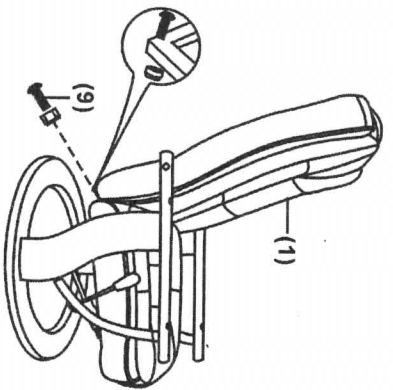

(2)X1(L)X1(R)




(9)X2



M8\*25mm

②

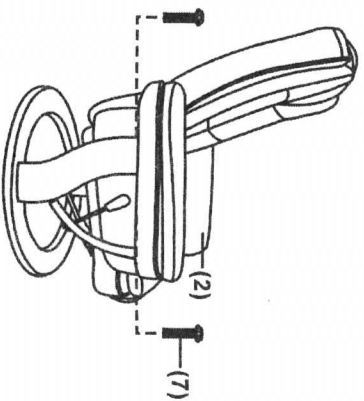

(3)X1




(10)X4




6.5\*18\*1.5mm

③

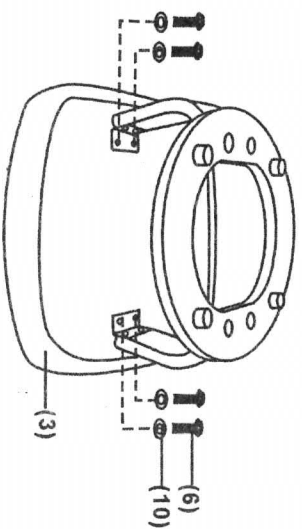

 (4)X1




(11)X4




8.5\*22\*2mm

④

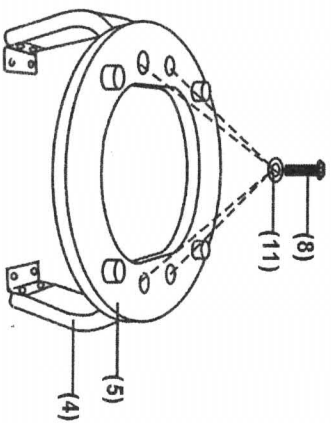

(5)X1

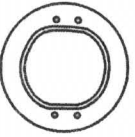

(12)X1



M5

(13)X1



M6

(6)X4



M6\*20mm

(14)X1



⑤

