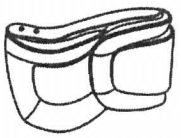 
 
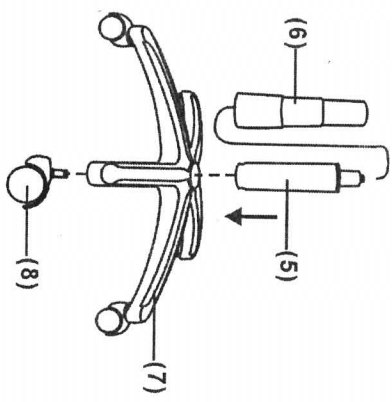 
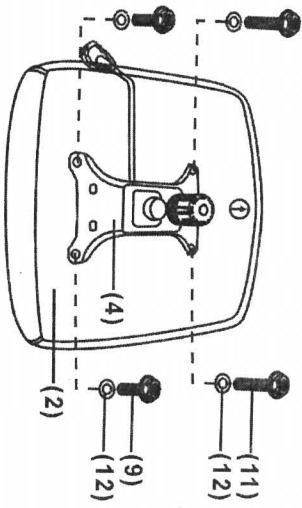 


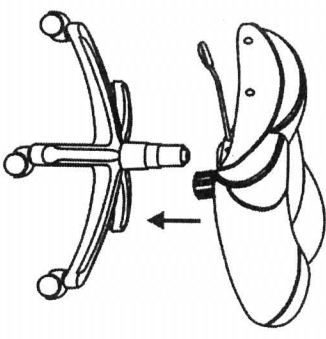 
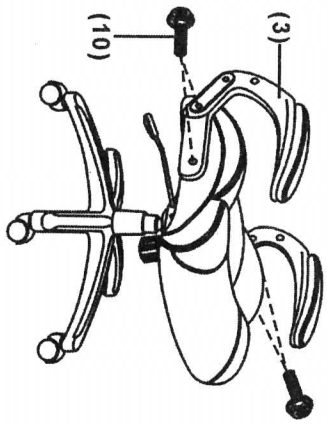 
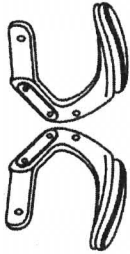 

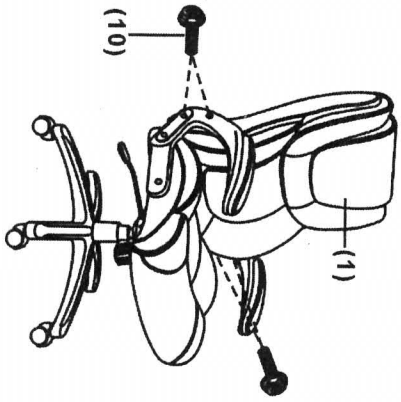 
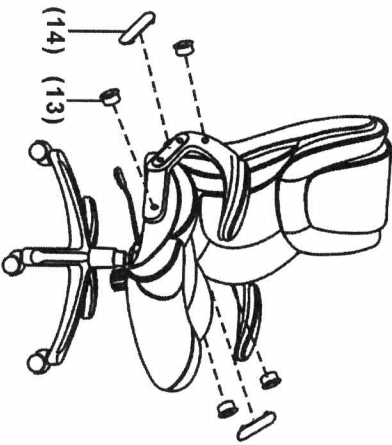 
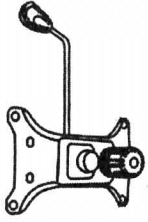 






 


 


# BT-9896H PARTS

# ASSEMBLY INSTRUCTION

<p>(1)X1</p> 	<p>(7)X1</p> 	<p>1</p> 	<p>2</p> 
<p>(2)X1</p> 	<p>(8)X5</p> 	<p>3</p> 	<p>4</p> 
<p>(3)X1(L)X1(R)</p> 	<p>(9)X2</p> 	<p>5</p> 	<p>6</p> 
<p>(4)X1</p> 	<p>(10)X8</p> 	<p>11</p> 	<p>12</p> 
<p>(5)X1</p> 	<p>(13)X4</p> 	<p>13</p> 	<p>14</p> 
<p>(6)X1</p> 	<p>(14)X2</p> 	<p>15</p> 	<p>15</p> 