

ASSEMBLY INSTRUCTION

DS-8220

Ax1	Ex1	Bx1	Fx4
Cx1	Gx4	Dx1	Hx1

