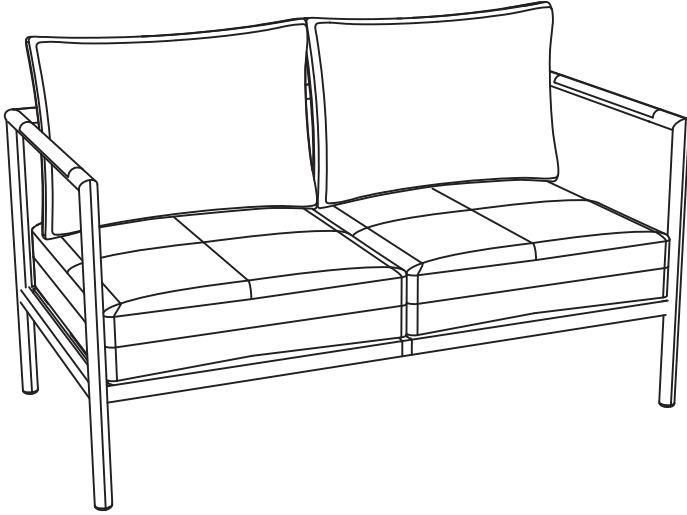




**ALUMINUM FRAMED  
TEAK ACCENT LOVESEAT  
WITH CUSHIONS**

## **ASSEMBLY INSTRUCTIONS**

### **Before You Begin:**

Please identify all component parts and hardware pieces required before your begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

### **Caution:**

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.



### **Warning:**


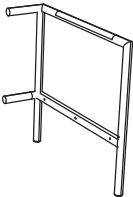


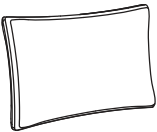


- CHOCKING HAZARD -Small Parts. Adult Assembly Required.
- DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal crushing injuries can occur from furniture tipping over. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping and causing any accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable the unit weight and wall materials (if not included) should be purchased and installed.

**Online Assembly Instructions:** <http://ftp.flashfurniture.com/AssemblyInstructions/GM-201027-2S-CH-GG.pdf>

# PARTS

| Part | Drawing                                                                             | Description   | QTY | Part  | Drawing                                                                               | Description | QTY |
|------|-------------------------------------------------------------------------------------|---------------|-----|-------|---------------------------------------------------------------------------------------|-------------|-----|
| A    |    | Left Armrest  | 1x  | H     |     | M6x40 Screw | 4x  |
| B    |    | Right Armrest | 1x  | I     |     | M6x70 Screw | 6x  |
| C    |   | Back          | 1x  | J     |    | Washer Ring | 12x |
| D    |  | Seat          | 1x  | K     |  | Nut         | 4x  |
| E    |  | Back Cushion  | 2x  | L / O |   | Cap A / B   | 10x |
| F    |  | Seat Cushion  | 2x  | M     |  | Allen Key   | 1x  |
| G    |  | M6x35 Screw   | 2x  | N     |   | Wrench      | 1x  |

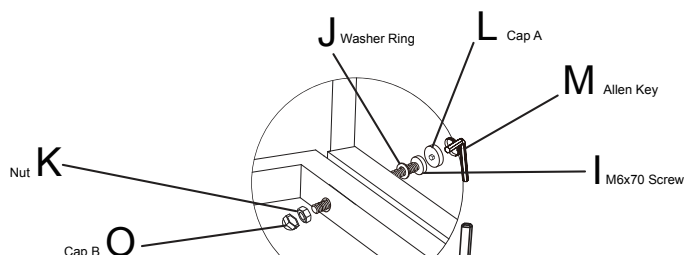
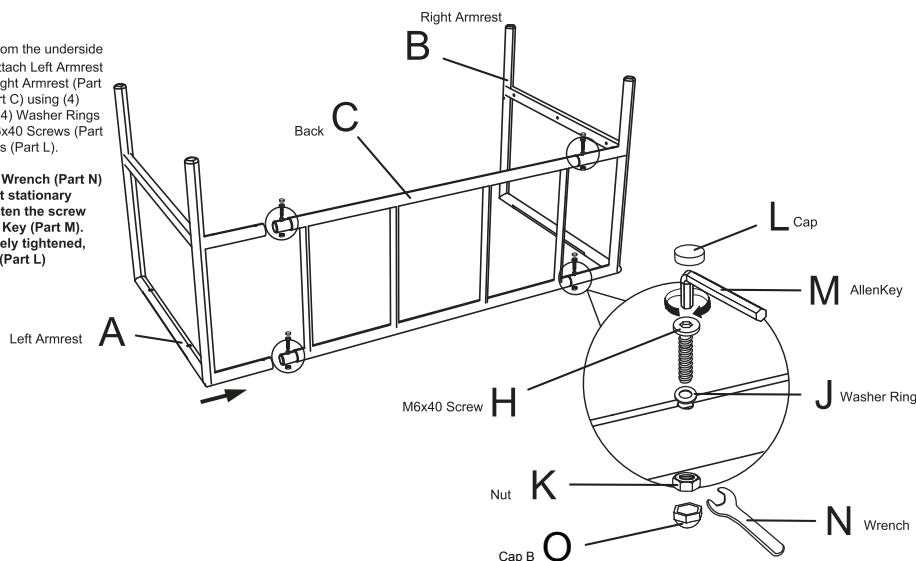
# STEPS

## STEP 1 REQUIRED PARTS


| Part | Image                                                                               | Description   | QTY |
|------|-------------------------------------------------------------------------------------|---------------|-----|
| A    |    | Left Armrest  | 1x  |
| B    |    | Right Armrest | 1x  |
| C    |    | Back          | 1x  |
| H    |    | M6x40 Screw   | 4x  |
| J    |    | Washer Ring   | 4x  |
| K    |    | Nut           | 4x  |
| L    |    | Cap           | 4x  |
| M    |    | Allen Key     | 1x  |
| N    |    | Wrench        | 1x  |
| O    |  | Cap B         | 4x  |

**STEP 1:** From the underside of the frame, attach Left Armrest (Part A) and Right Armrest (Part B) to Back (Part C) using (4) Nuts (Part K), (4) Washer Rings (Part J), (4) M6x40 Screws (Part H) and (4) Caps (Part L).

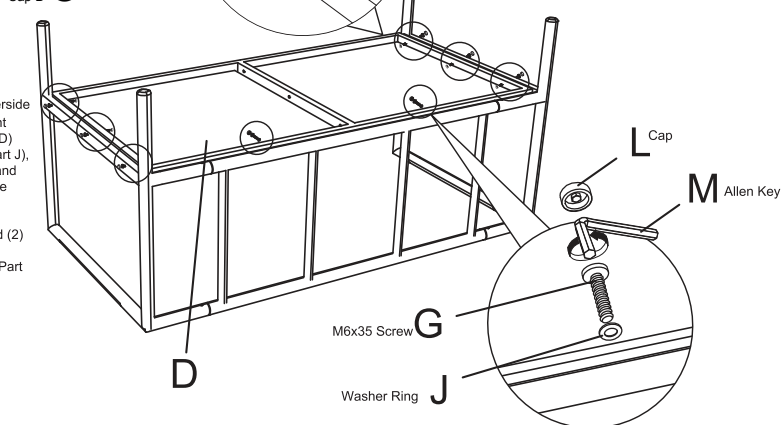
**Note:** Use the Wrench (Part N) to hold the nut stationary while you tighten the screw with the Allen Key (Part M). Once completely tightened, add the Caps (Part L).



## STEP 2 REQUIRED PARTS

| Part | Image                                                                               | Description | QTY |
|------|-------------------------------------------------------------------------------------|-------------|-----|
| D    |  | Seat        | 1x  |
| G    |  | M6x35 Screw | 2x  |
| I    |  | M6x70 Screw | 6x  |
| J    |  | Washer Ring | 8x  |
| K    |  | Nut         | 6x  |
| L    |  | Cap A       | 8x  |
| M    |  | Allen Key   | 1x  |
| O    |  | Cap B       | 6x  |

**STEP 2:** From the underside of the frame, attach the front and sides of the seat (Part D) using (6) Washer Rings (Part J), (6) M6x70 Screws (Part I) and (6) Caps (Part K). Attach the back of the seat using (2) Washer Rings (Part J), (2) M6x35 Screws (Part G) and (2) Caps (Part L). Tighten the screws with the Allen Key (Part M) then install Caps.



## STEP 3 REQUIRED PARTS

| Part | Drawing                                                                             | Description  | QTY |
|------|-------------------------------------------------------------------------------------|--------------|-----|
| E    |  | Back Cushion | 2x  |
| F    |  | Seat Cushion | 2x  |

**STEP 3:** Place Seat Cushions (Part F) and Back Cushions (Part E) onto loveseat.

